

Notice

Mirage 2000C

Ech 1:144




2000C_144_N_FDM



2000C_144_A_FDM




2000C_144_C_FDM

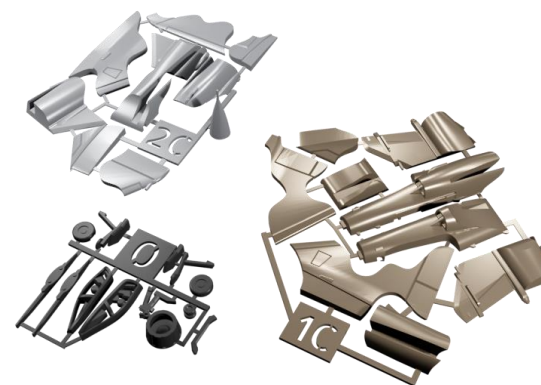


2000C_144_N_FDM

1 Page 3-4

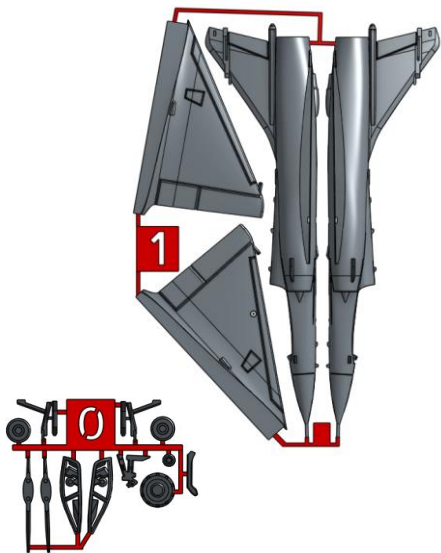


2000C_144_A_FDM

1 Page 5 to 7

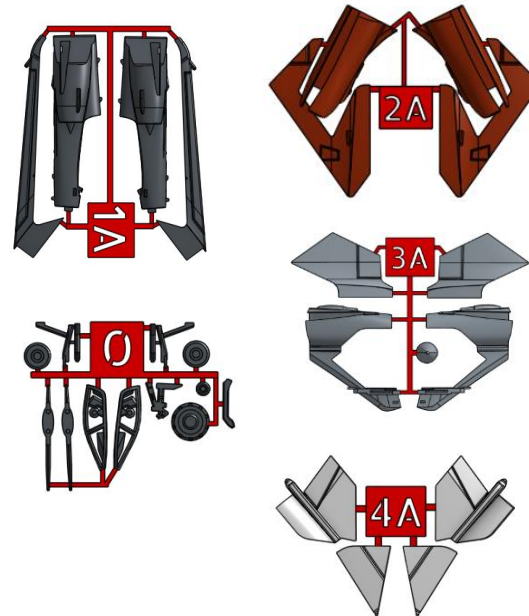


2000C_144_C_FDM


1 Page 8 to 11

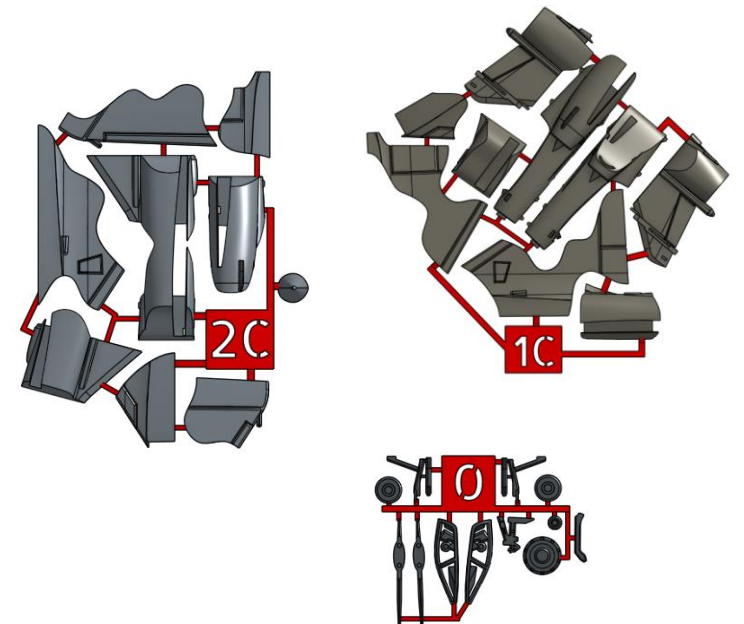


2 V1.0N

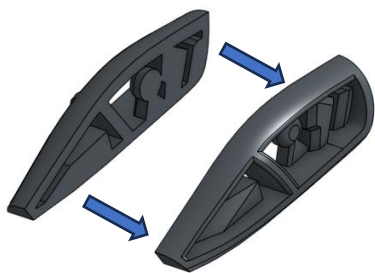


3

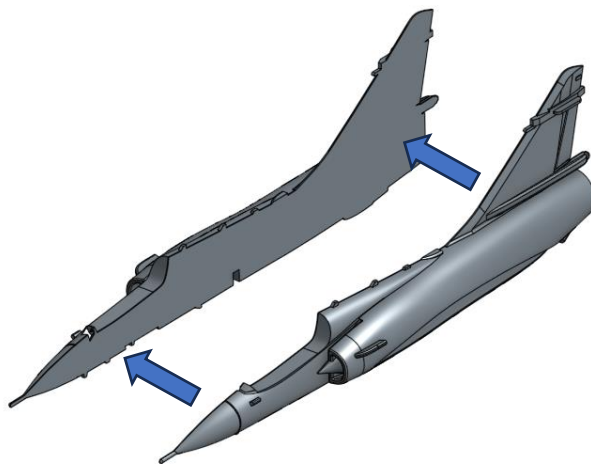

4


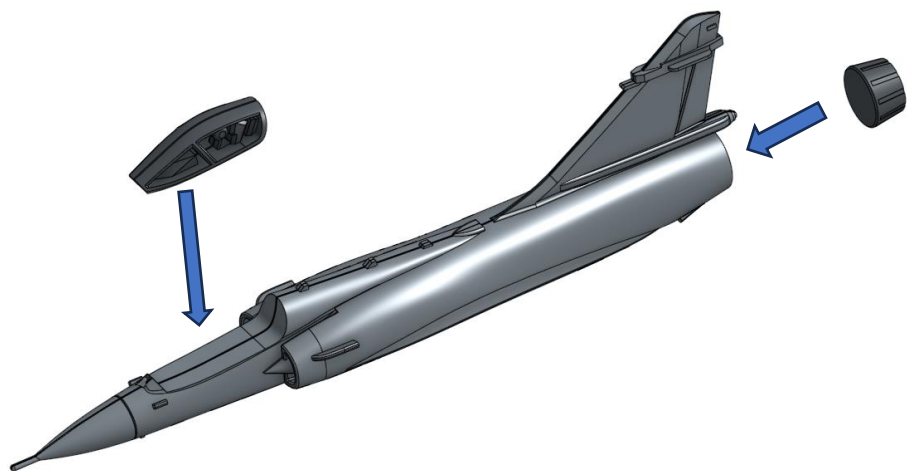


5

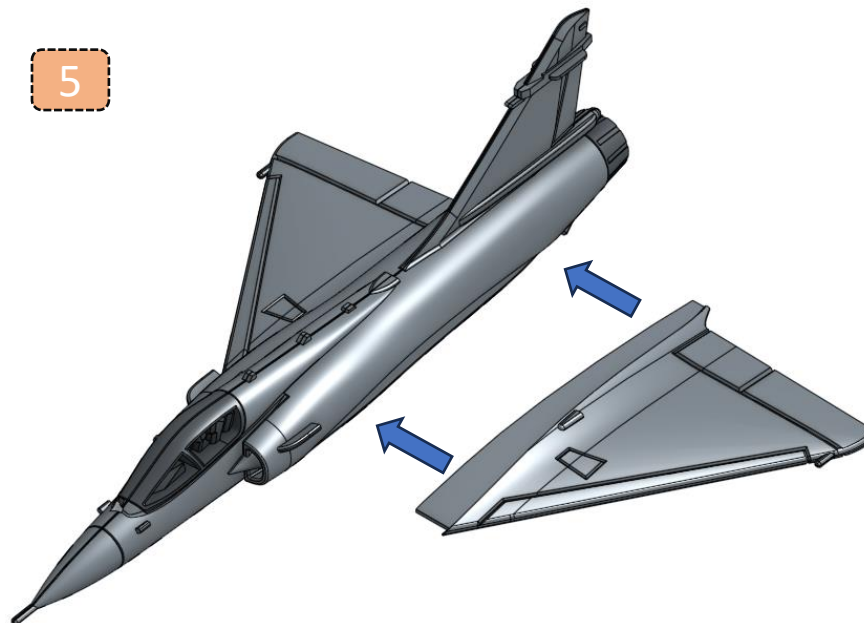


7

6

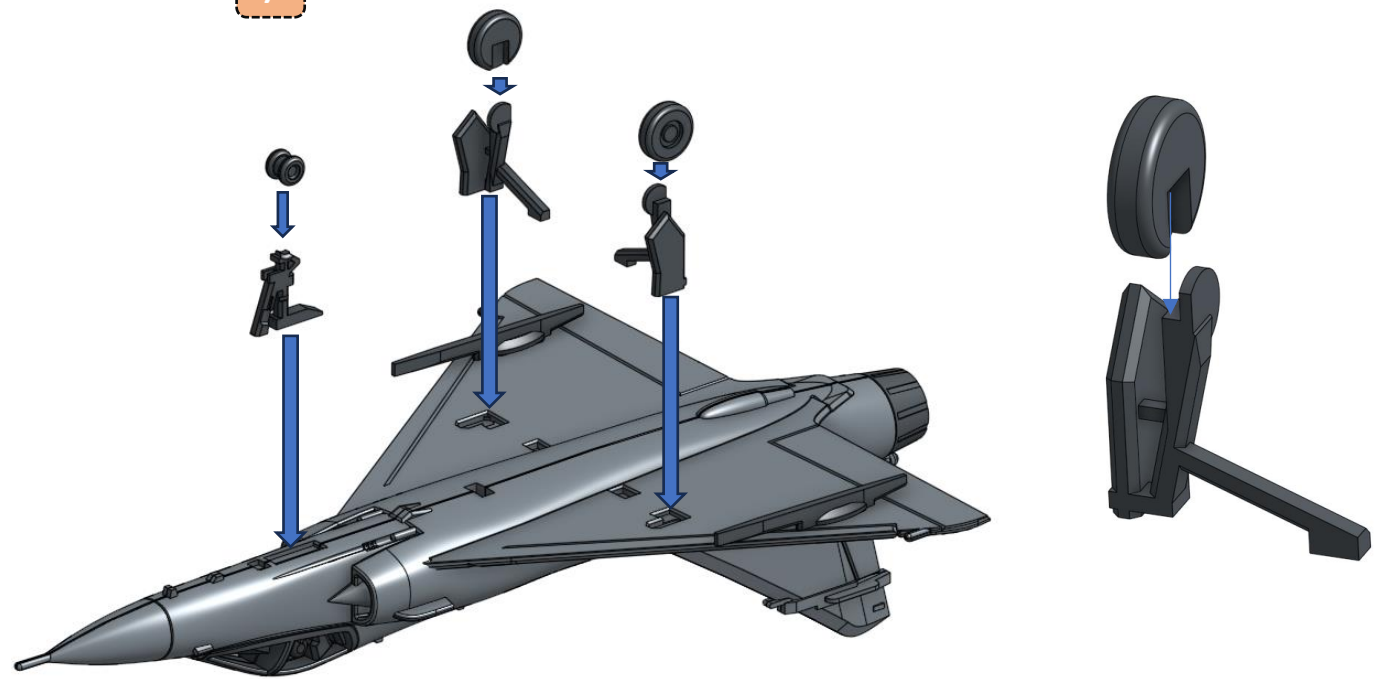
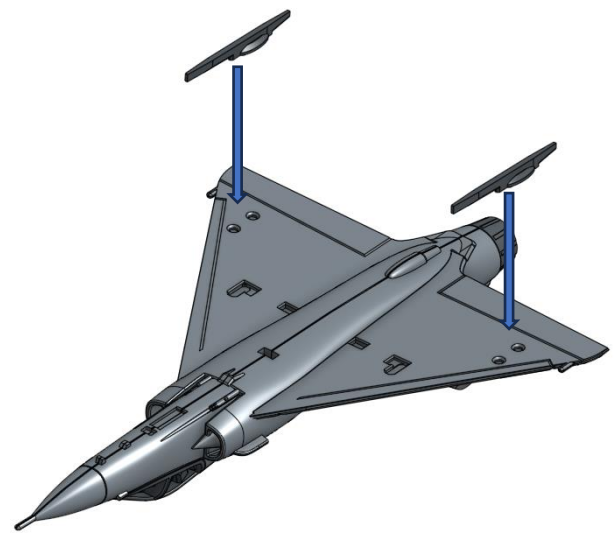


8

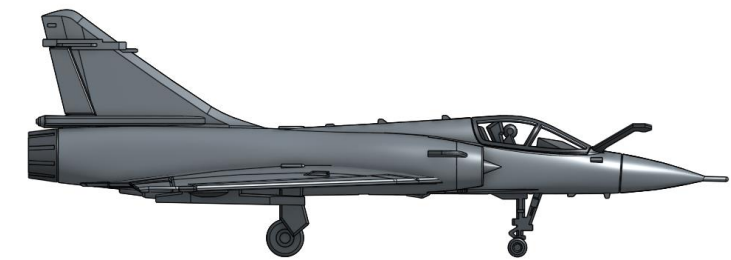


End


2 V1.0A

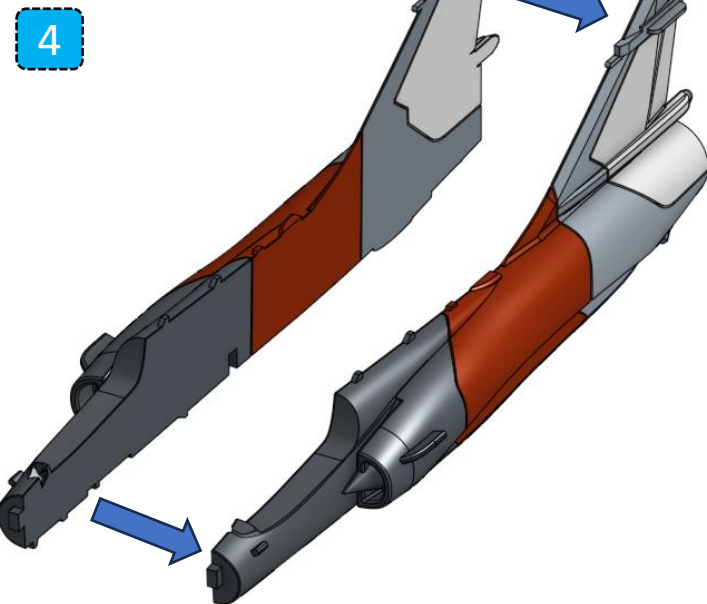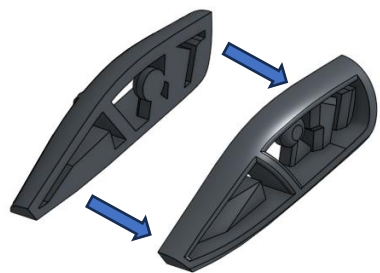


3 /!\ Use a flat surface to assure the alignements

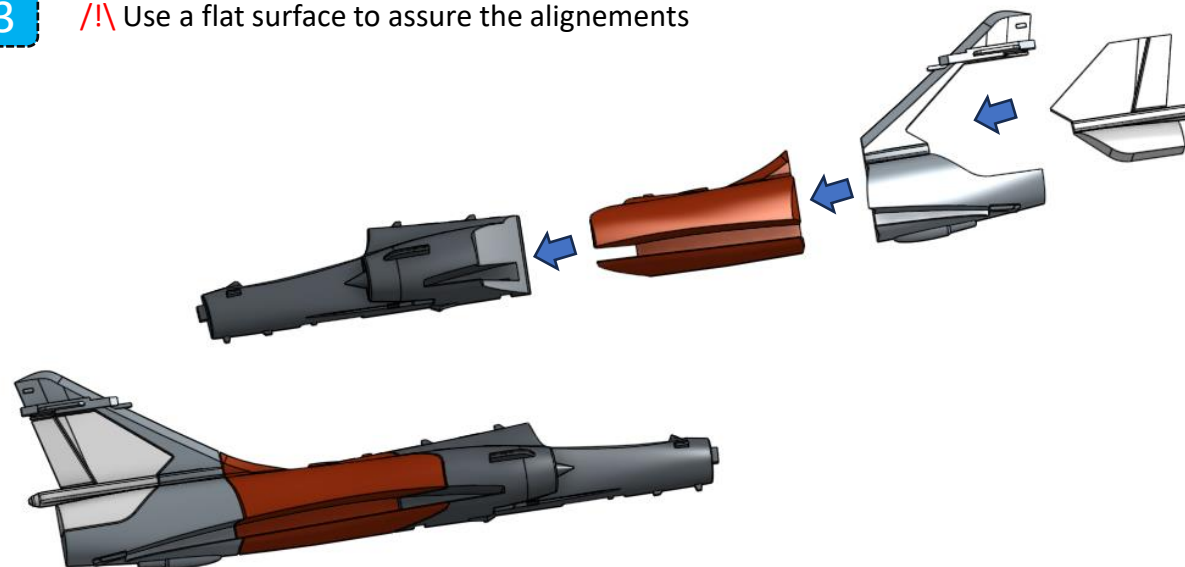


5

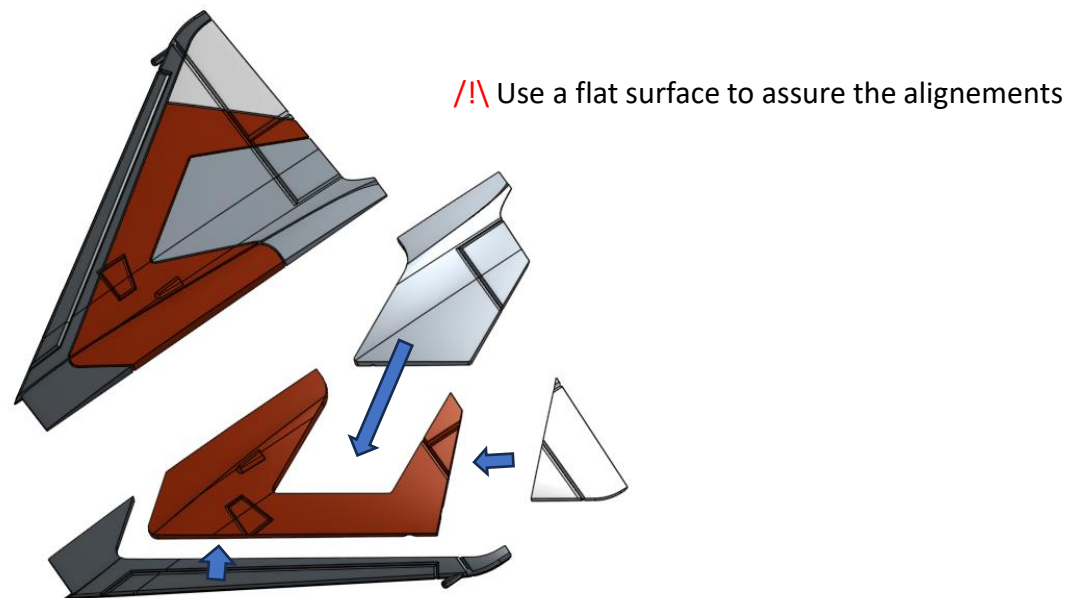


6

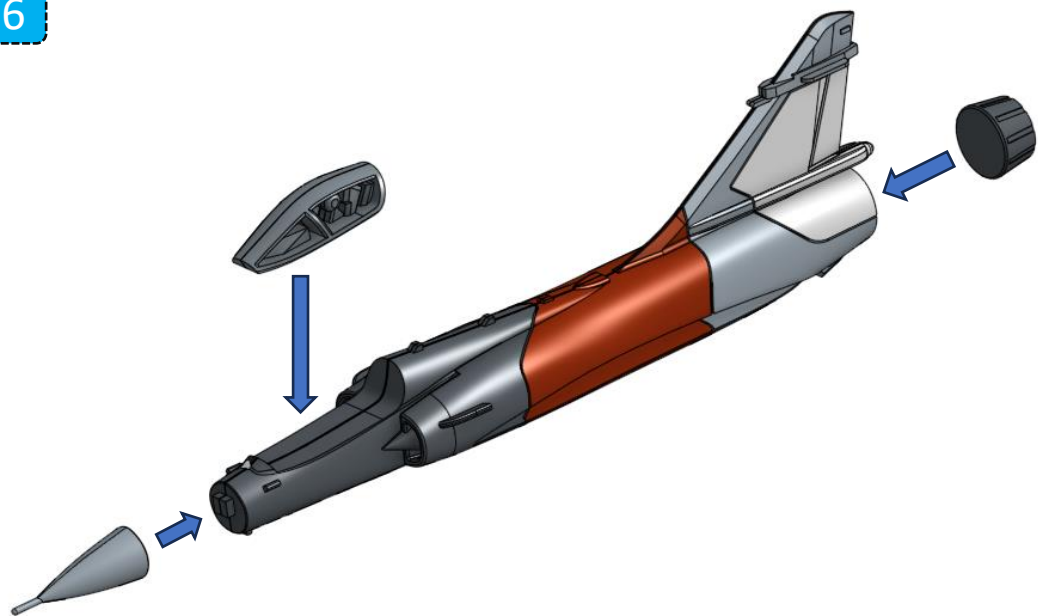

7

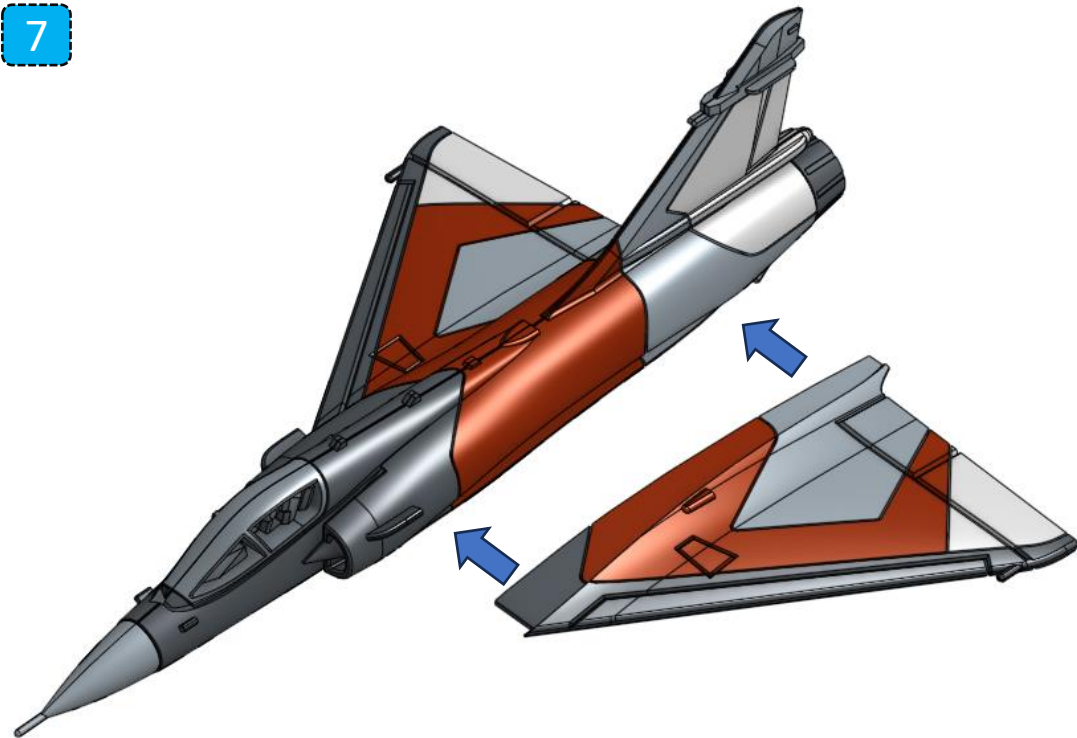

8


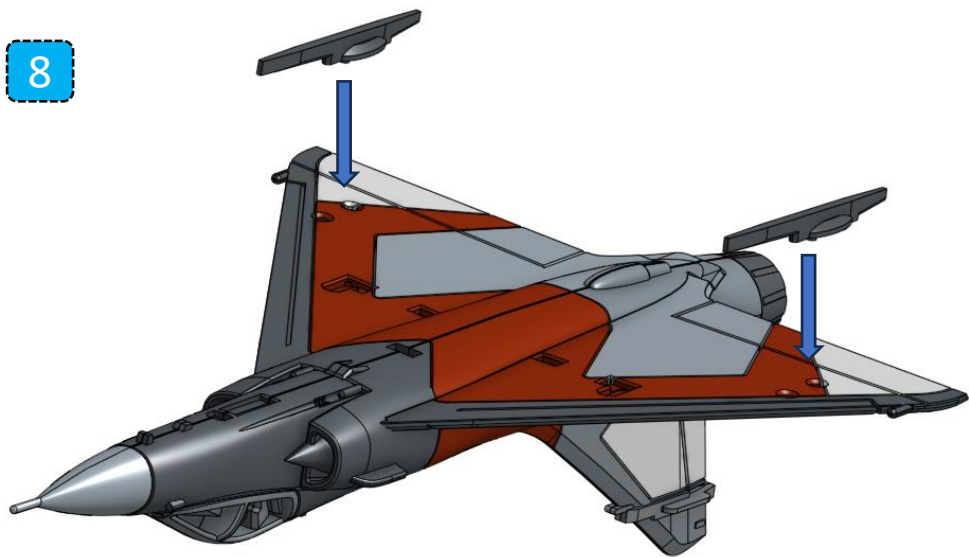


9



10A


Landing gears Option

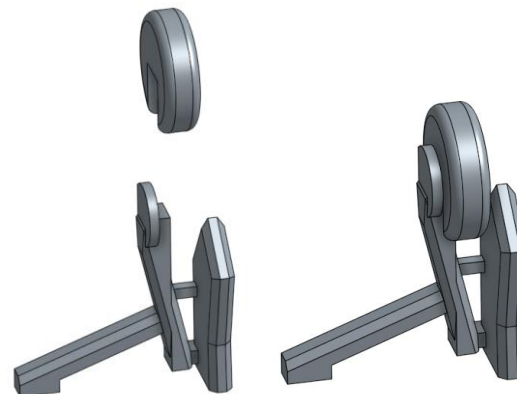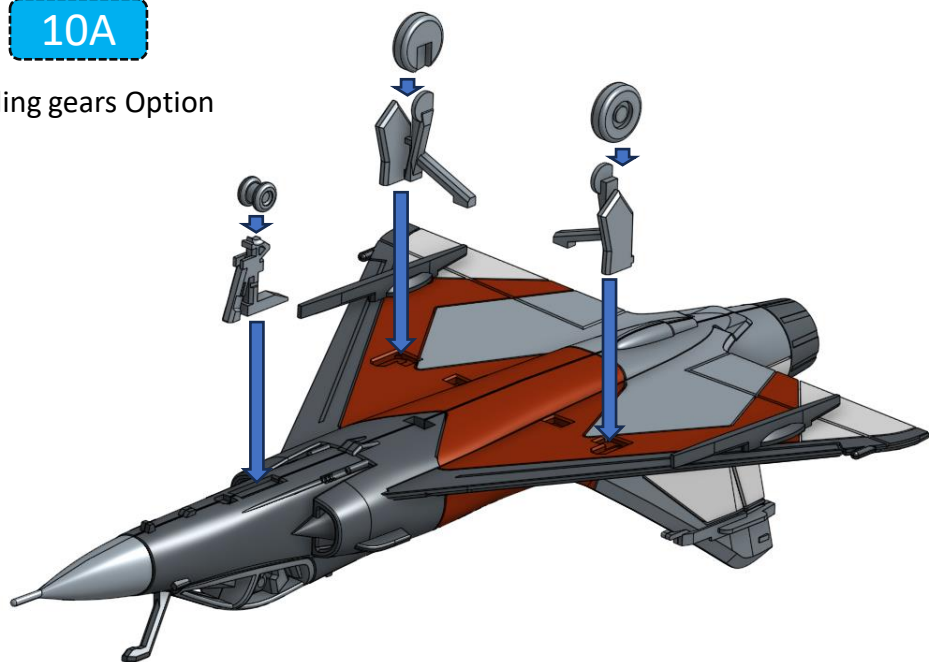

Post treatment & varnished


10B

Stand Option



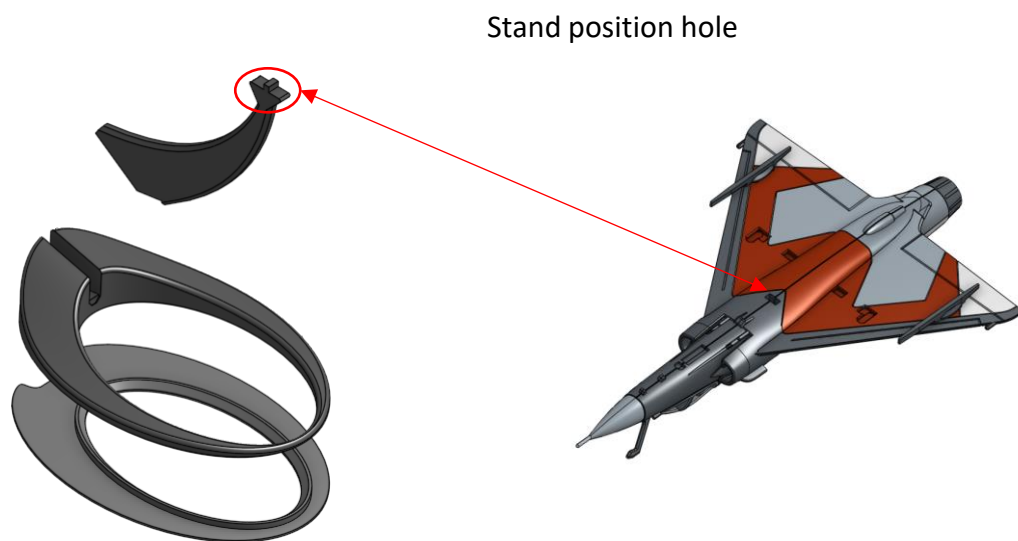


End


2 V1.0A

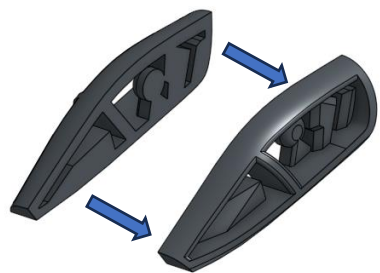

3 /!\ Use a flat surface to assure the alignements

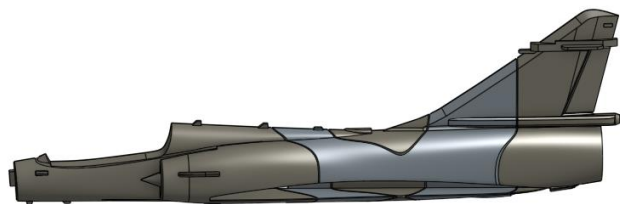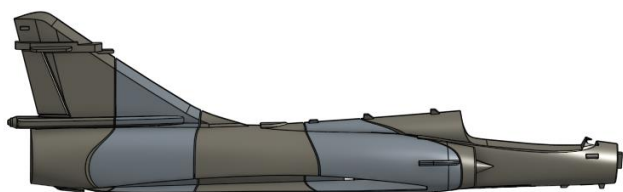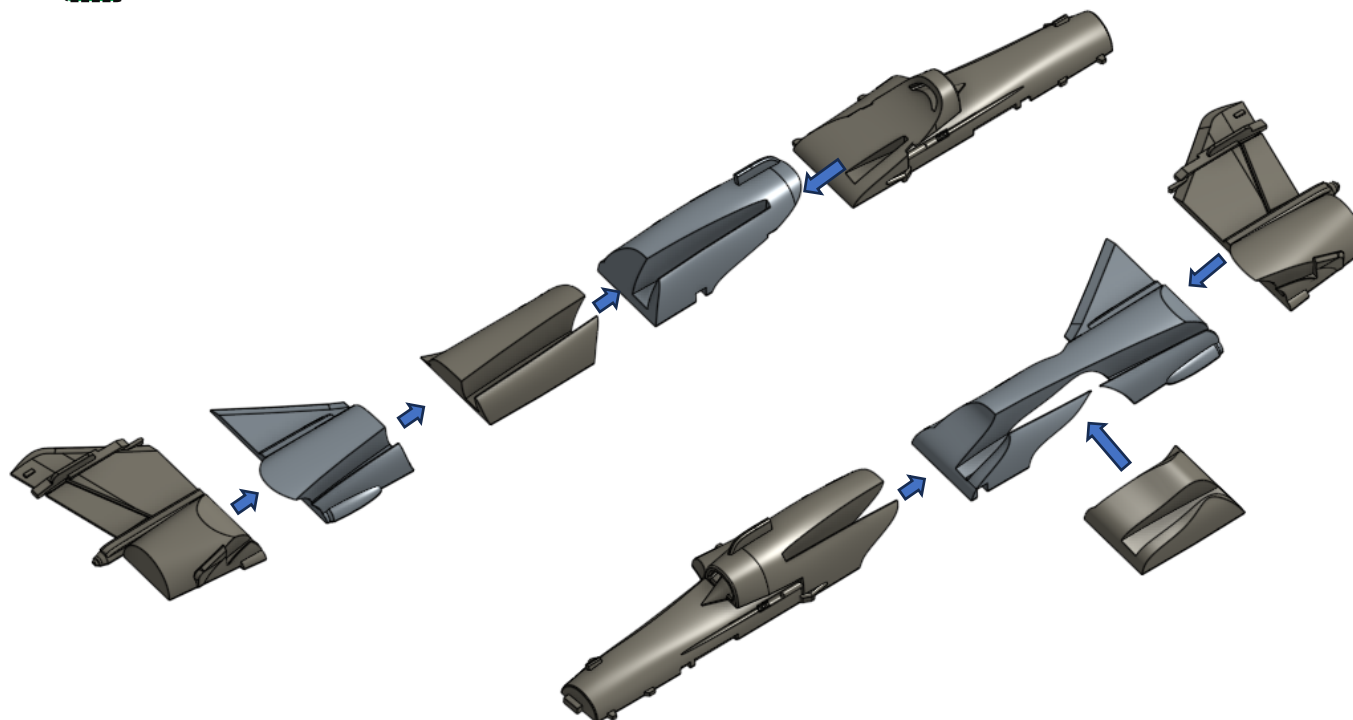


4

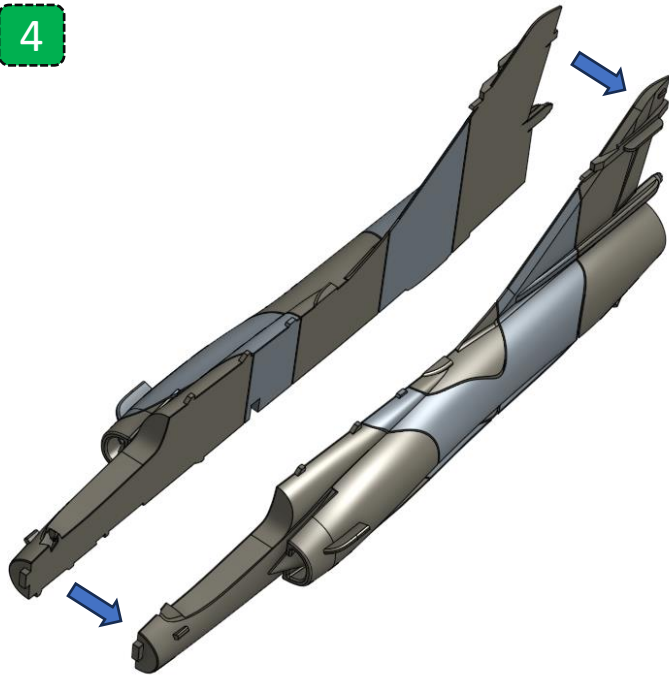


5


⚠ Use a flat surface to assure the alignements

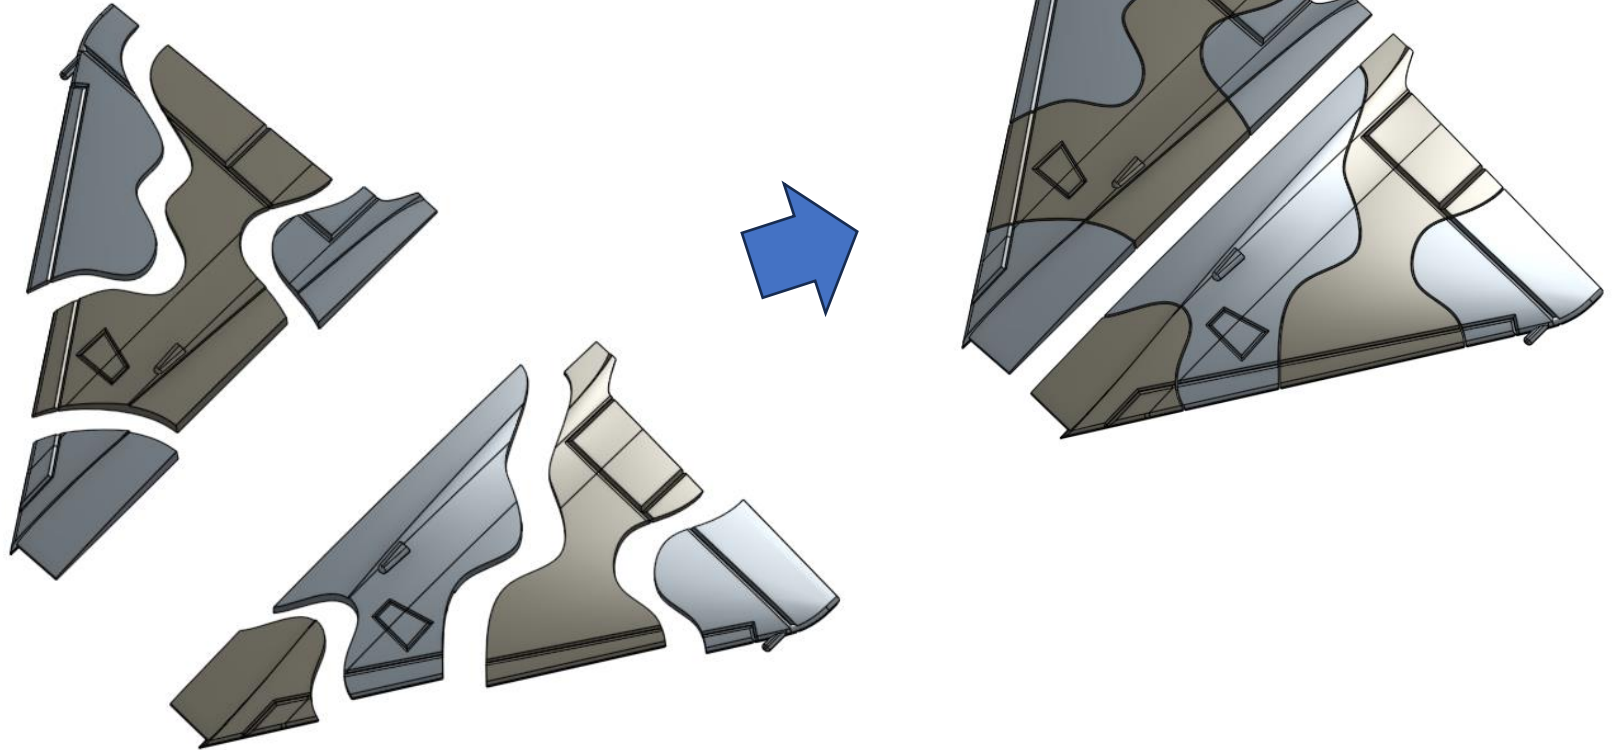


6

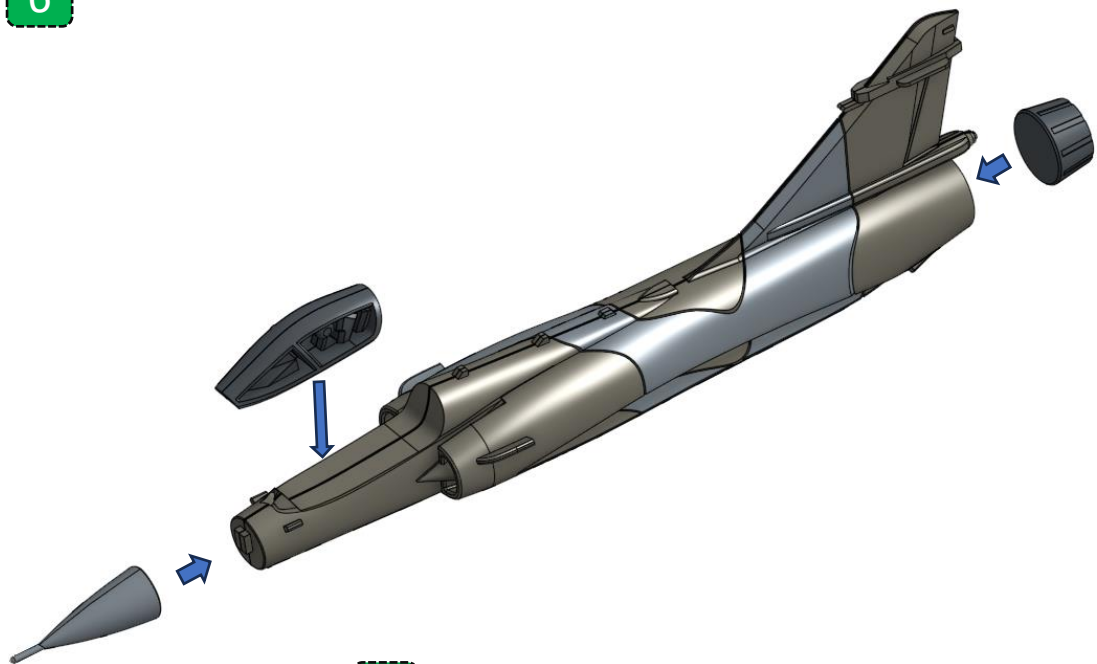


7

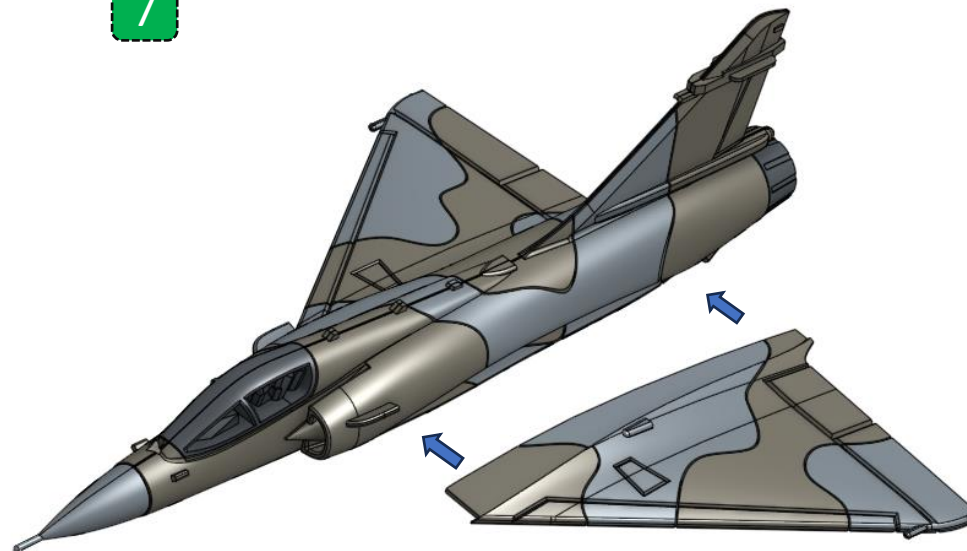

8


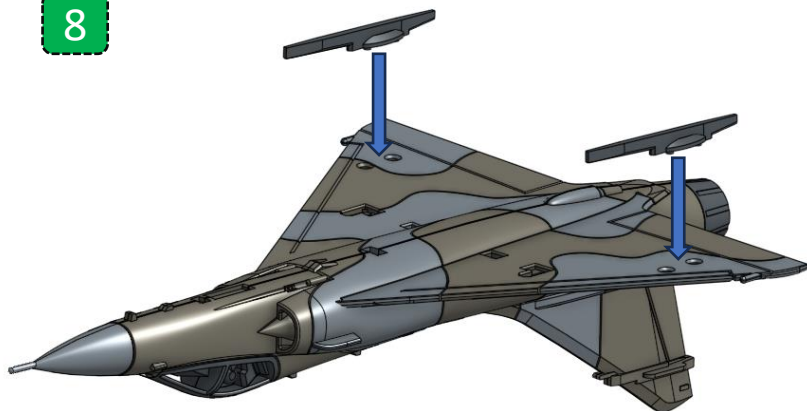


9

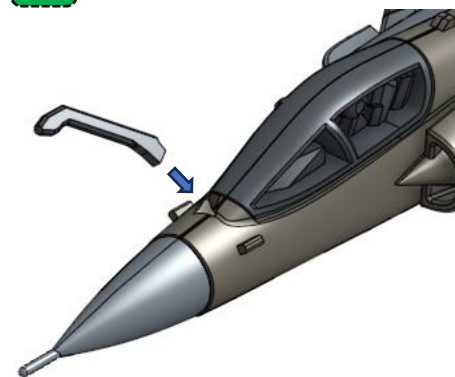

10A

Landing gears Option

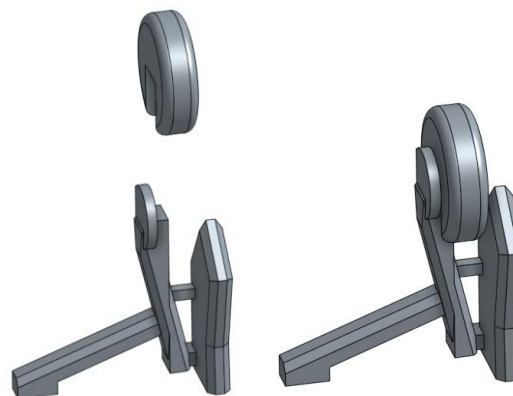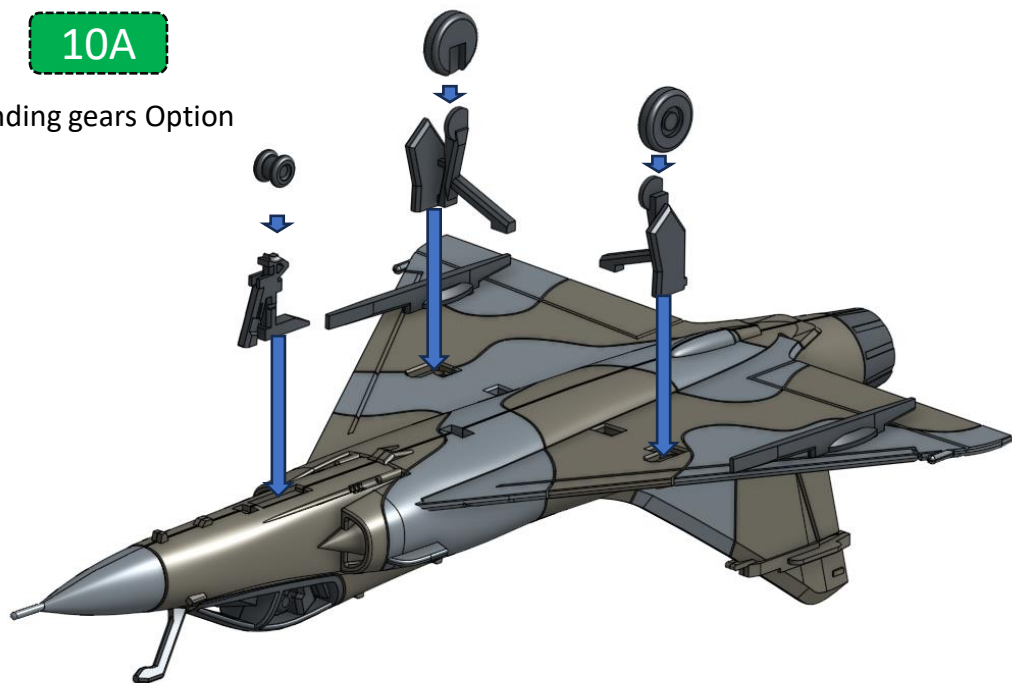


Post treatment & varnished



10B

Stand Option

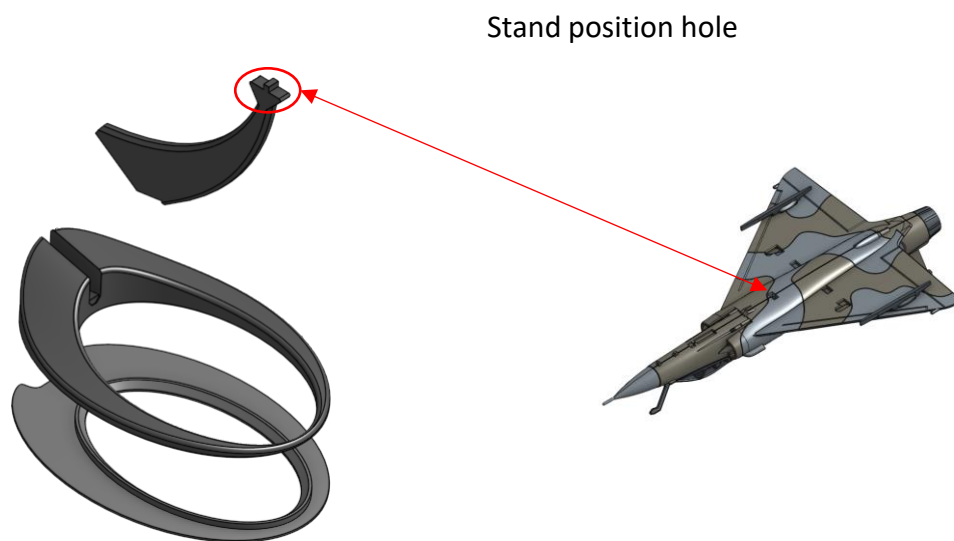

End